 



CARE OF CHROMEBOOK

Charge your
Device Every
Night

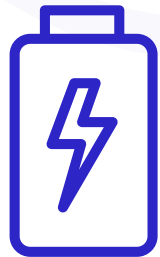

Use Two
Hands to
Carry Device

 Use Clean
Hands

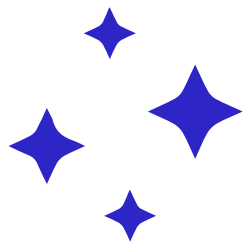

No Food or
Drink
Around
Device



SUFFOLK
PUBLIC SCHOOLS

For More Info...



Contact your child's teacher.



<https://spsk12.net/>



CHROMEBOOK CARE & TIPS



Remove Profile

On the Chromebook sign-in screen, select the profile you want to remove. Next to the profile name, select the Down arrow. Select "Remove Account." In the box that appears, select "Remove account."

Clear Cache



In your Chrome Browser, select the three dots on the right. Scroll down to "More Tools," and then select "Clear Browsing Data." For time range, select "All time," select "Cookies and other Site Data" and "Cached Images and Files." Finally, select "Clear Data."

 


Connecting to Home WiFi

Locate the time in the bottom right hand corner and press to open the menu. Click the text below the Wi-Fi icon. Select your home Wi-Fi. After selecting, enter your home Wi-Fi password and Connect.

CHROMEBOOK

TROUBLESHOOTING TIPS

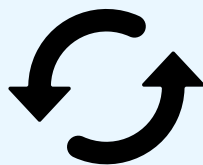

Restart Chromebook

Select the time at the bottom right of the Chromebook. Select the "Shutdown" icon.



Update Chrome Browser

Click the time in the bottom right corner of your Chromebook. Select the gear icon. Select "About Chrome OS". Select "Check for Updates". Relaunch the browser when prompted.

Check out this step by step guide!

bit.ly/3LOWktk



Reset the Chromebook

Hold down the ESC, REFRESH, and POWER keys at the same time. At the next screen, press the power key to turn the device off and press power again to turn the device back on.



Use SPS

Provided Chargers Only

Use HP Original Equipment Manufacturer (OEM) for charging only. Use of non-OEM chargers may result in electrical shock, equipment damage, and is a fire hazard.

Reset Chrome

Settings to Default



In your Chrome Browser, select the three dots on the right, and select "Settings." From the left toolbar, select "Advanced" and then select "Reset Settings." Select "Restore settings to their original default," and select "Reset Settings."